

Basic Tripod Operations

The All Terrain Butler operations can be found in the “How to Support Section” at www.TheAllTerrainButler.com

1. When you receive this product, please verify that your order is complete.
2. When using your tripod ensure that the screws, knobs, and locking parts are fixed and locked to avoid accidental damage to any attached electronics.
3. Do not use a tripod in an unstable place. If the location is unstable deploy the All Terrain Feet and secure with the provided spikes for soft ground or the sand spikes. If the ground doesn't allow for either of these options consider purchasing the optional stability brace.
4. Be sure to remove your camera or cell phone from the tripod when moving the tripod.
5. Avoid using at temperatures under -22° F. or over 158° F.
6. Please pay attention to cleaning after use especially after use in wet and sandy places. Not suitable for use in sea water.
7. The tripod is designed with a safe load for the intended equipment. Do not load equipment that exceeds this weight to avoid damage to the stability of the tripod that could also affect the photo-graphic effect.
8. The tripod is made of conductive material. For safety guidelines refrain from using it in dangerous locations such as but not limited to, in the vicinity of weather with the potential of lightning or near high voltage lines.
9. The selfie cell phone remote control instructions to Bluetooth connect to your cell phone is packaged with the selfie remote control.


WARNING: To avoid danger of suffocation, keep these plastic packaging bags away from babies and children. Do not use this bags in cribs, beds, carriages or play pens.

1 Year Limited Warranty Coverage

The warranty does not apply to damages caused by mishandling, dropping, or leaking batteries, nor modification or servicing performed by others. The warranty covers manufacturing defects.


Your product has been carefully manufactured and has passed our quality assurance checks, and has been thoroughly tested before shipment. If you have any issues, please contact us at customerservice@TheAllTerrainButler.com

1. Tripod Head

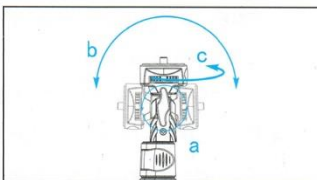


- a. Twist left and right to adjust the angle of the head
- b. Twist left and right to fix or release electronic products
- c. It adjusts 360° head rotation

2. Flip Lock Operation

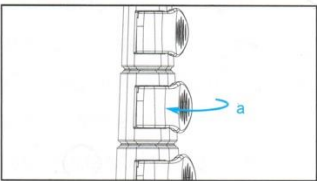


- a. Open the flip locks, and extend each tube to the desired height. Then re-lock each tube.


3. Tripod Base Operation

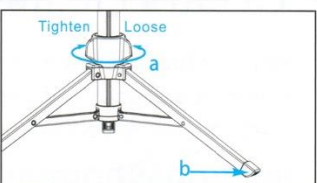

- a. Clockwise rotation locks and counterclockwise rotation unlocks.
- b. Anti-slip rubber pad

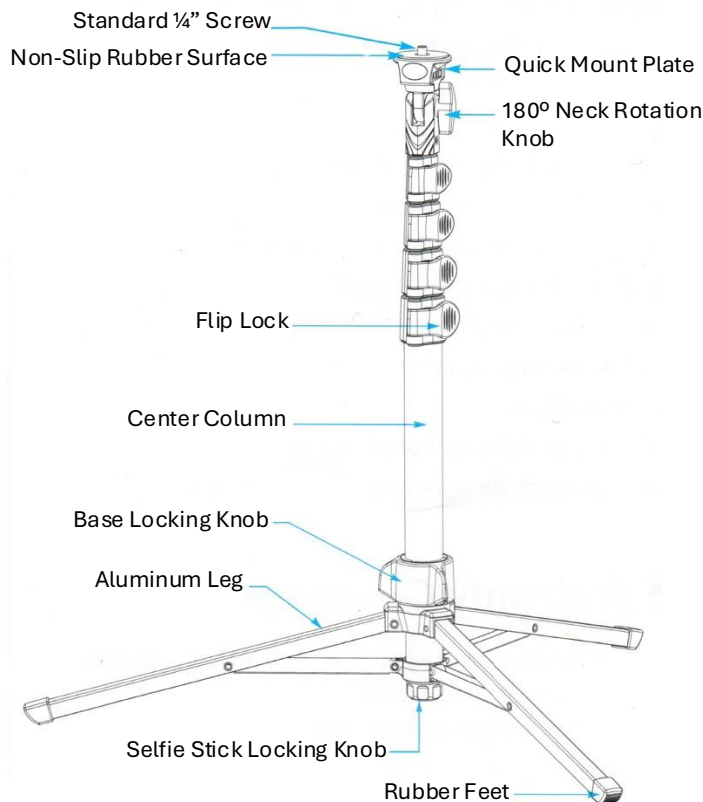


4. Tripod Stages

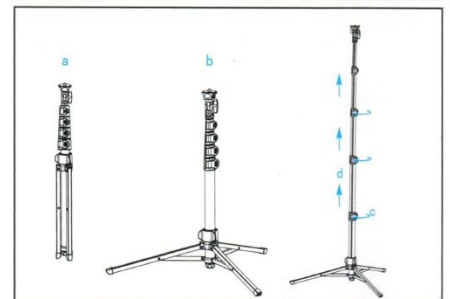

- a. Tripod folded status
- b. Minimum working height
- c. Maximum working height

5. Selfie Stick Conversion

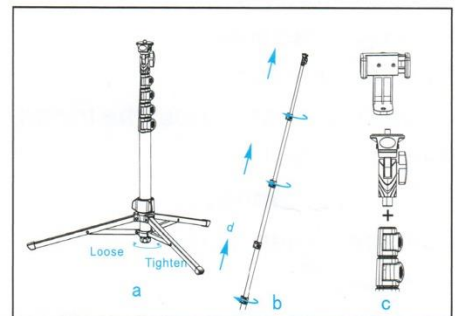

- a. Loosen the Selfie Stick Locking Knob and the Base Locking Knob to take the center column out.
- b. Open the flip locks, and extend each tube to the desired length, then re-lock each tube.
- c. Attach the phone mount on the top plate and mount it by twisting the black disk to the cell phone mount.

Scan the QR code for
how to videos in the
“How to Support Section”

